


TYPICAL LIMA MAC GENERATOR

Parts List

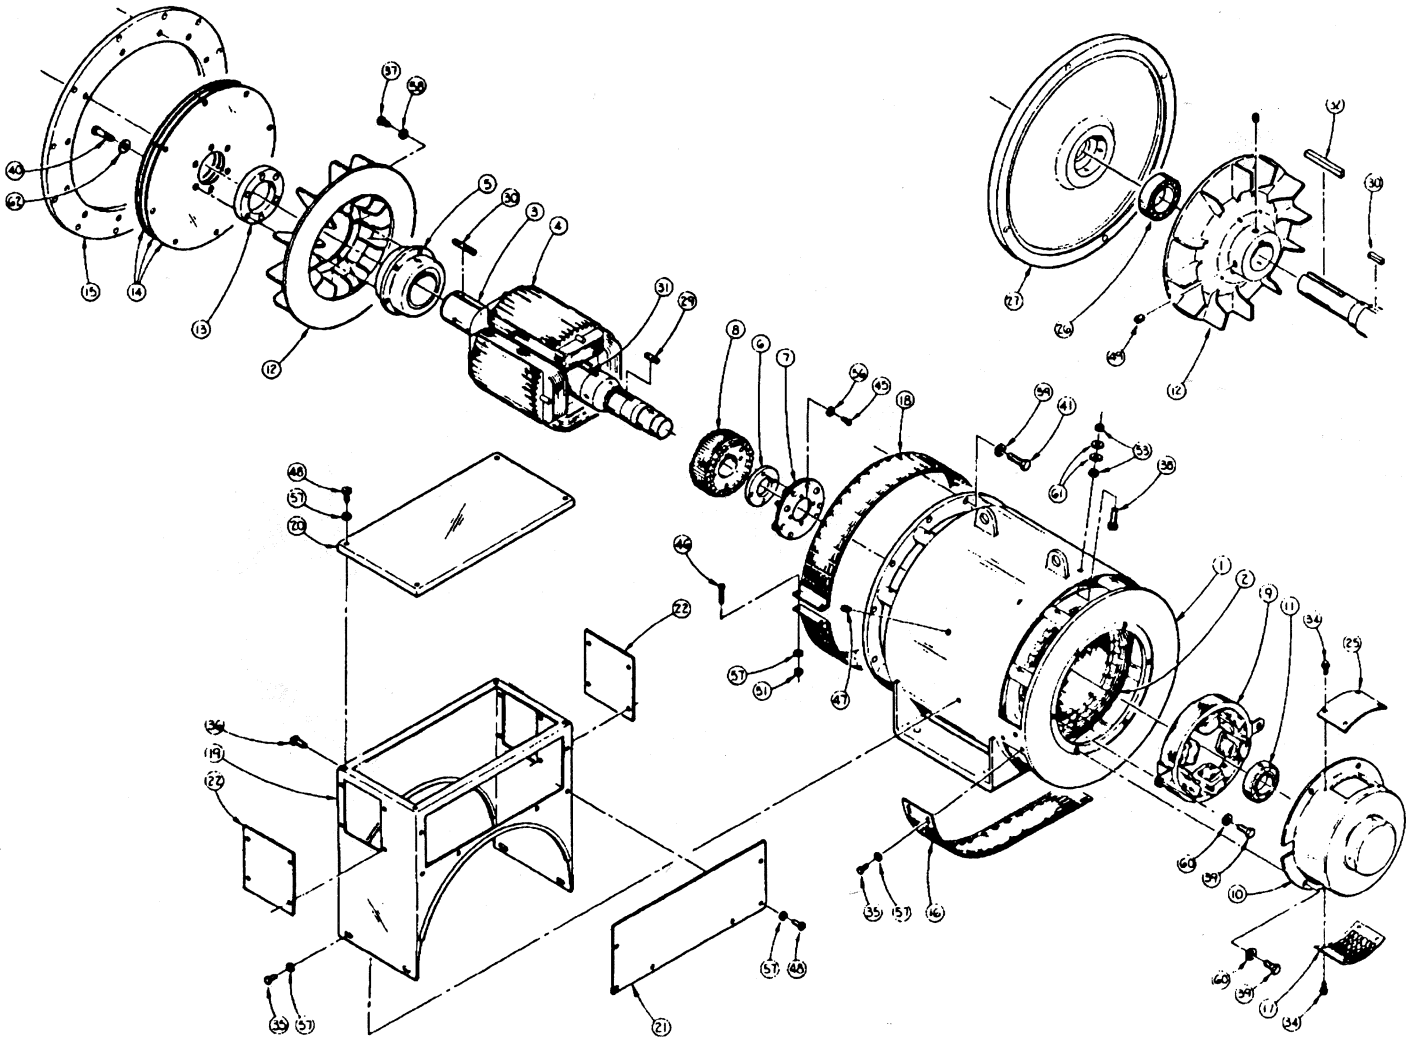

Item	Description	Item	Description	Item	Description
1	Frame	19	Connection Box	39	Capscrew
2	Main Stator	20	Cover	40	Capscrew
3	Shaft	21	Front Panel	41	Capscrew
4	Main Rotor	22	Side Panel	45	Screw - Rd. Hd.
5	Drive Hub	25	Cover Plate	46	Screw - Rd. Hd.
6	Rectifier Hub	26	Bearing	47	Screw - Socket Set
7	Rectifier Assembly	27	Endbell	48	Screw - Pan Hd.
8	Exciter Rotor	28	Retaining Ring	49	Screw - Socket Set
9	Exciter Stator	29	Key	51	Nut
10	Endbell	30	Key	53	Nut
11	Bearing	31	Key	56	Washer - Shakeproof
12	Fan	32	Key	57	Washer - Split Lock
13	Hub Spacer	34	Capscrew	58	Washer - Split Lock
14	Disc Coupling	35	Capscrew	59	Washer - Split Lock
15	Adaptor Ring	36	Capscrew	60	Washer - Split Lock
16	Intake Screen	37	Capscrew	61	Washer - Flat
17	Endbell Screen	38	Capscrew	62	Washer - Flat
18	Screen & Cover Band				

Prices and data subject to change without notice.
Printed in U.S.A.