


TYPICAL LIMA SER GENERATOR

Parts List

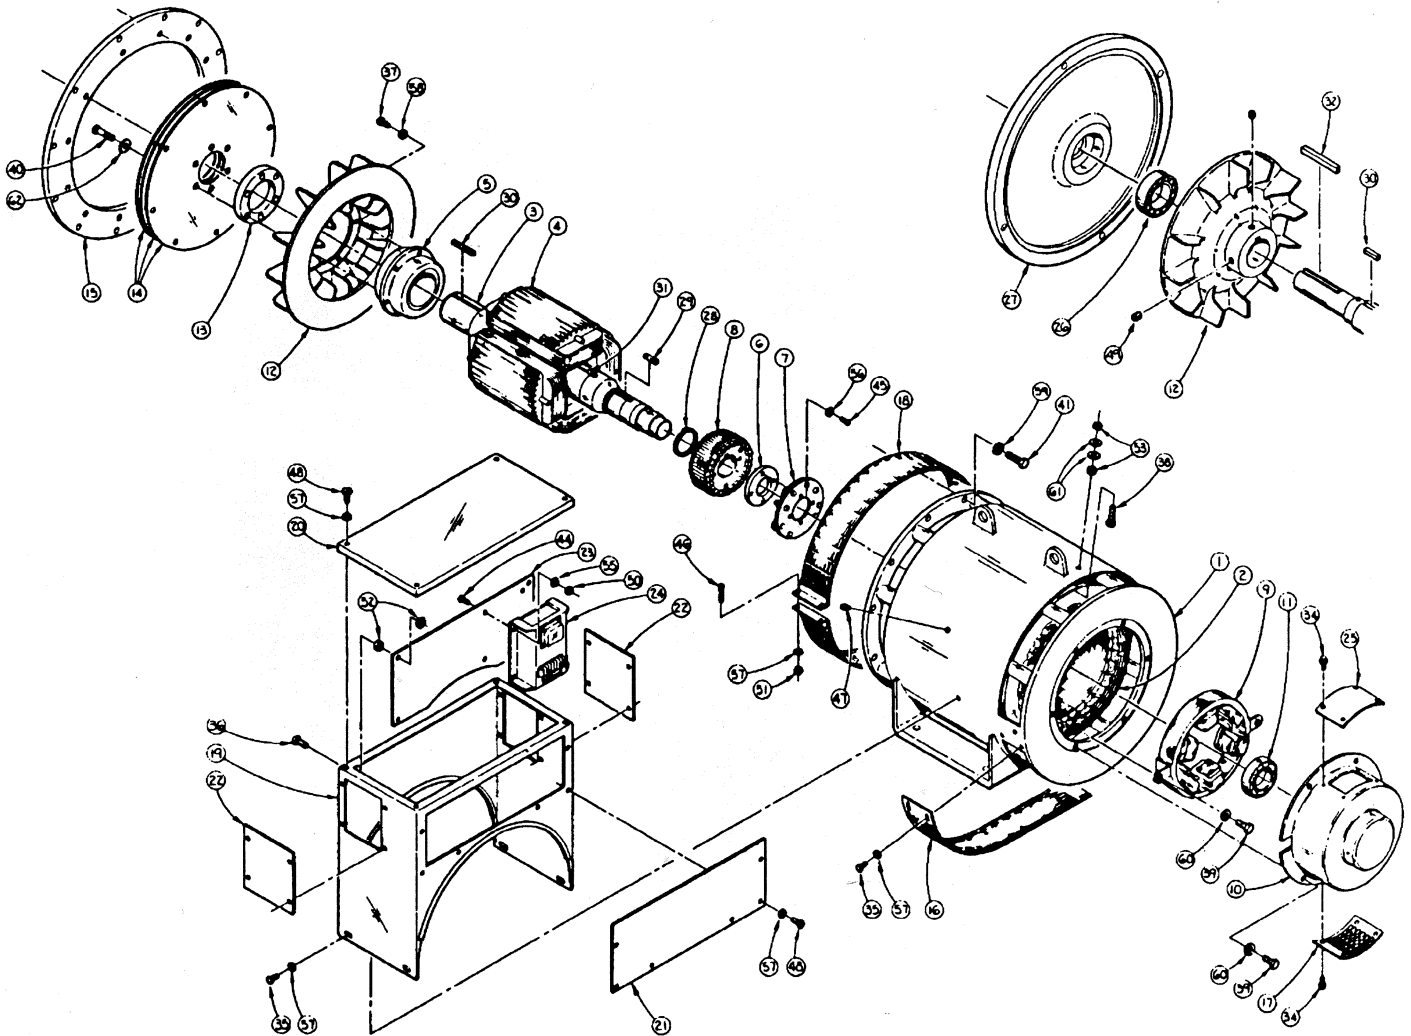

Item	Description	Item	Description	Item	Description
1	Frame	21	Front Panel	41	Capscrew
2	Main Stator	22	Side Panel	44	Screw - Rd. Hd.
3	Shaft	23	Mounting Panel	45	Screw - Rd. Hd.
4	Main Rotor	24	Regulator	46	Screw - Rd. Hd.
5	Drive Hub	25	Cover Plate	47	Screw - Socket Set
6	Rectifier Hub	26	Bearing	48	Screw - Pan Hd.
7	Rectifier Assembly	27	Endbell	49	Screw - Socket Set
8	Exciter Rotor	28	Retaining Ring	50	Nut
9	Exciter Stator	29	Key	51	Nut
10	Endbell	30	Key	52	Nut
11	Bearing	31	Key	53	Nut
12	Fan	32	Key	55	Washer - Split Lock
13	Hub Spacer	34	Capscrew	56	Washer - Shakeproof
14	Disc Coupling	35	Capscrew	57	Washer - Split Lock
15	Adaptor Ring	36	Capscrew	58	Washer - Split Lock
16	Intake Screen	37	Capscrew	59	Washer - Split Lock
17	Endbell Screen	38	Capscrew	60	Washer - Split Lock
18	Screen & Cover Band	39	Capscrew	61	Washer - Flat
19	Connection Box	40	Capscrew	62	Washer - Flat
20	Cover				

Prices and data subject to change without notice.
Printed in U.S.A.